




Sony Clie PEG-SL10 Motherboard Replacement

This guide will show you how to install a new motherboard in your Sony Clie.

Written By: Emily

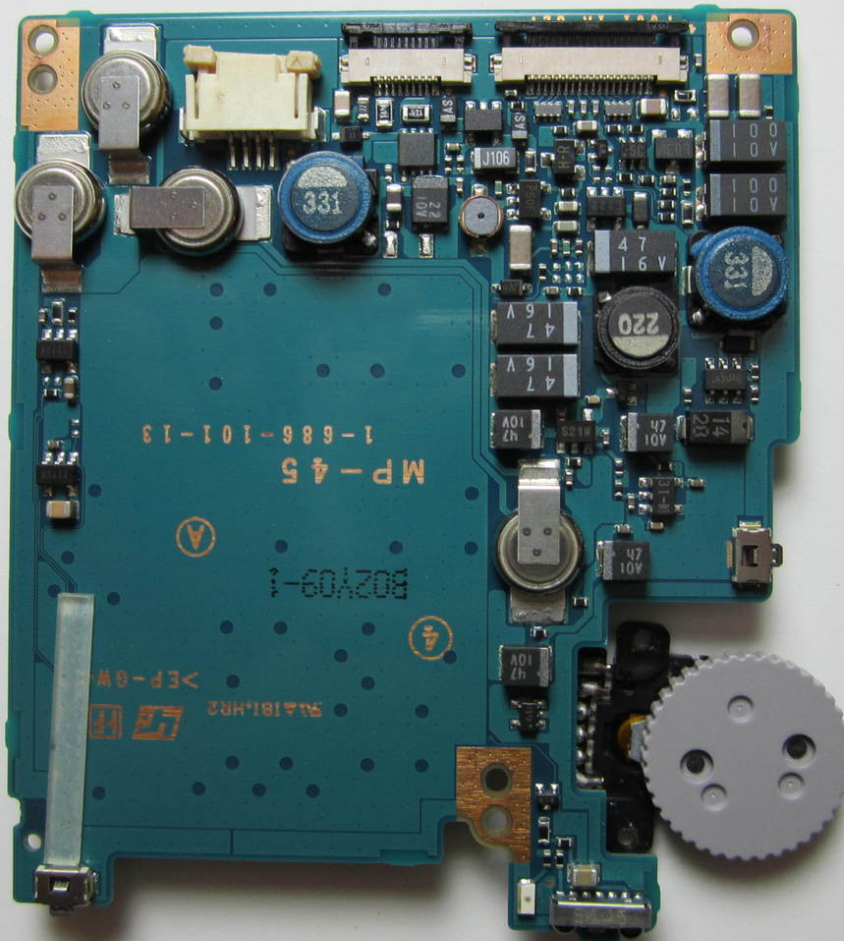



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Motherboard



- Remove the six screws holding the case together.

Step 2

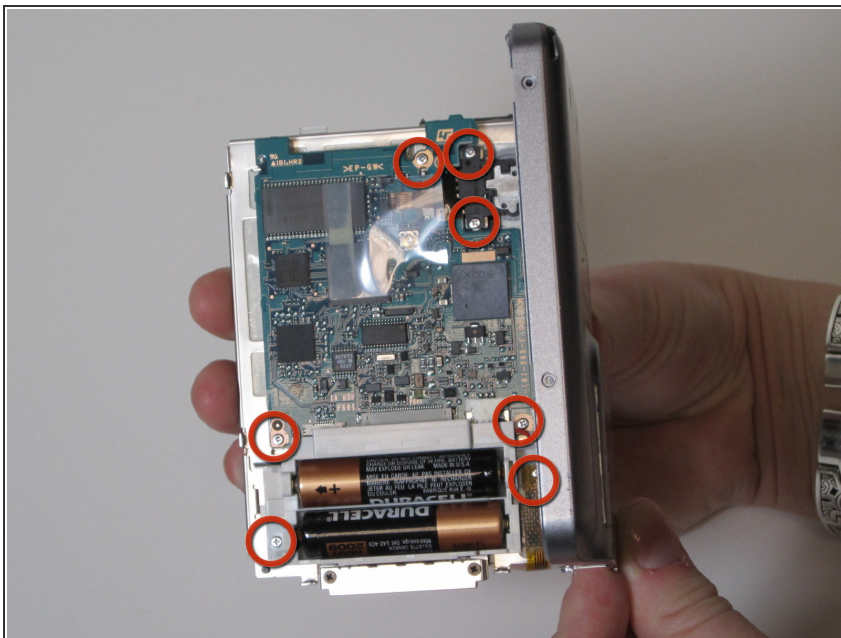

- Remove the seven screws holding the motherboard to the device.

Step 3




- Unclip the battery harness power cable from the motherboard.

Step 4




- Unclip the scroll wheel power cable from the motherboard.

Step 5

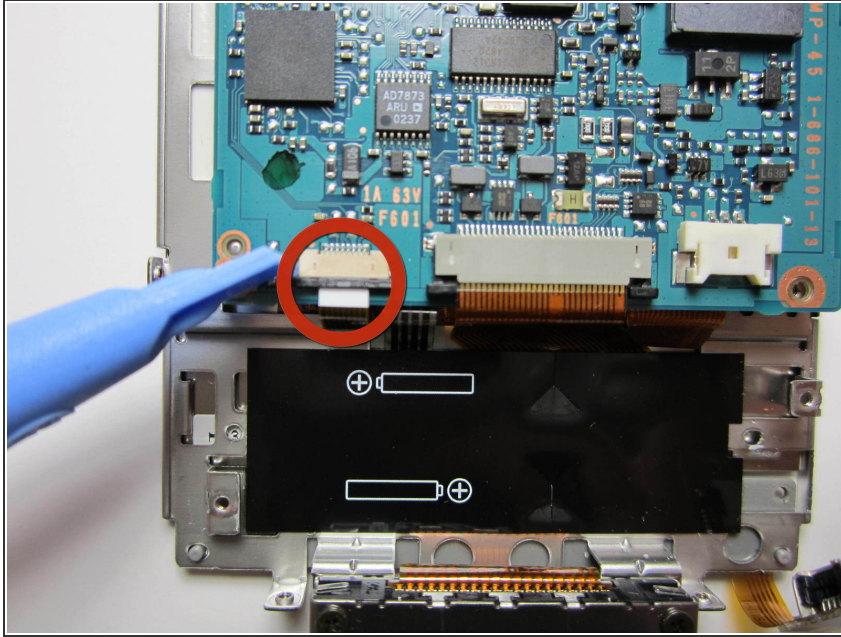


- Pull the left clip to remove the cable.

Step 6

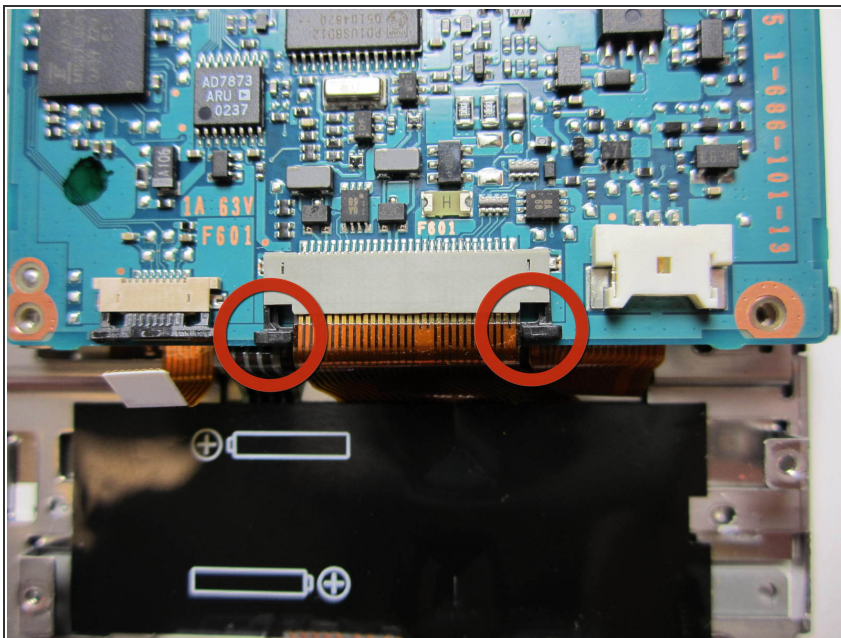


- Pull out the two clips from the center to remove the power cable.

Step 7

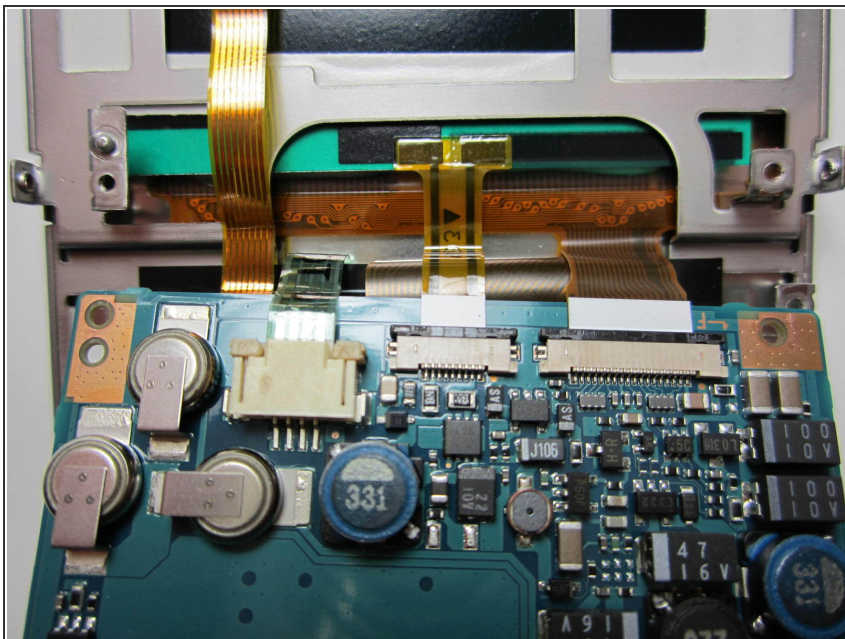


- Rotate the motherboard toward you to show the cables on the opposite side of the motherboard.

Step 8

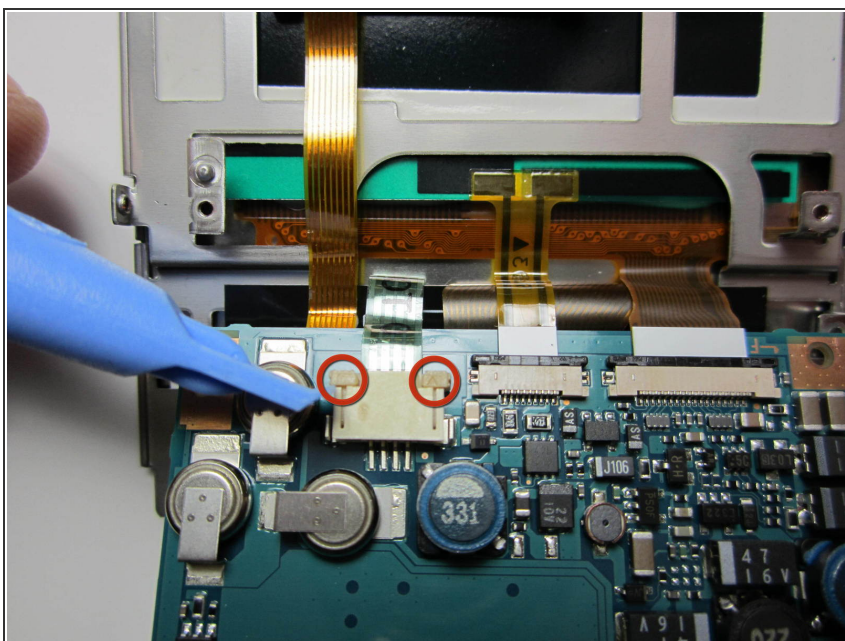


- Extend both sides of the left clip to remove the power cable.

Step 9

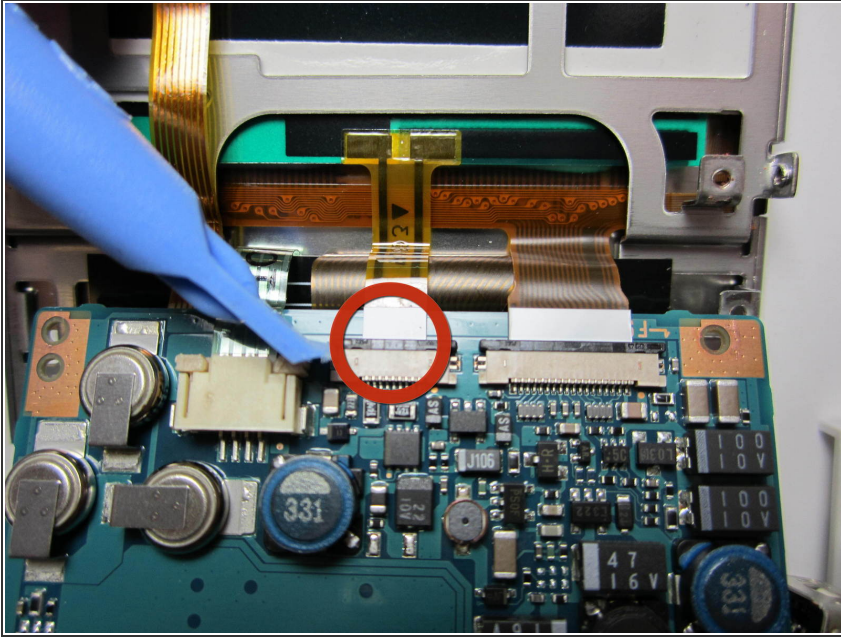


- Pull out the center clip to remove the power cable.

Step 10

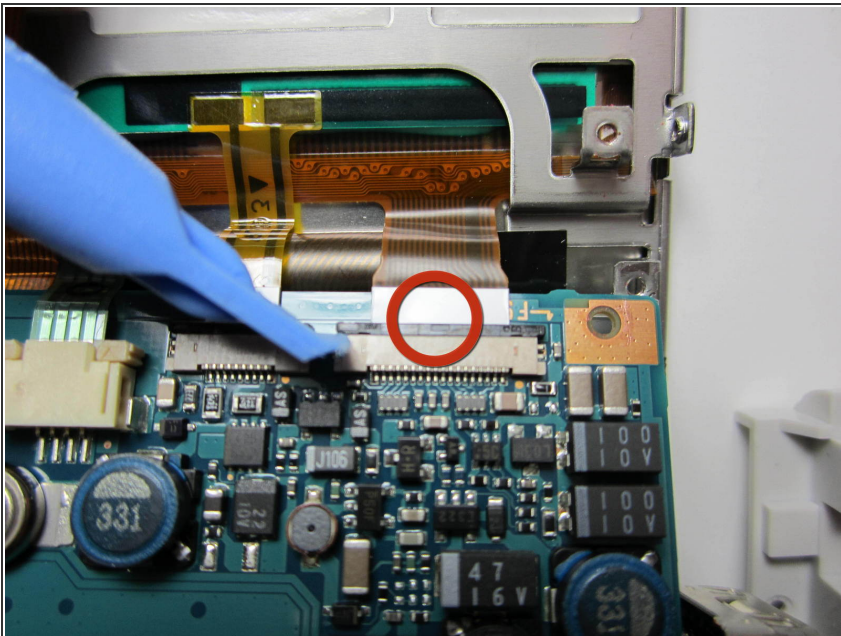

- Pull the right clip out to remove the right cable.

Step 11

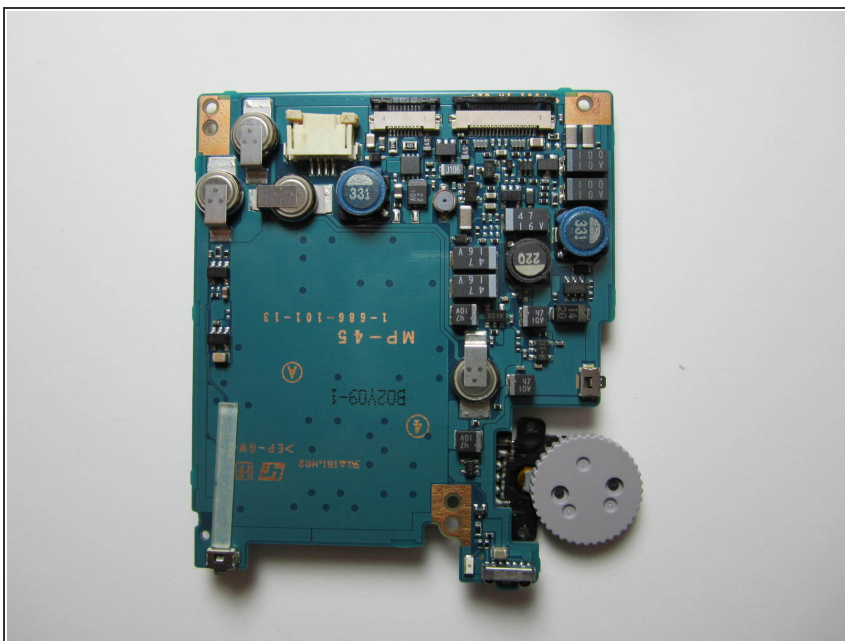

- The motherboard is removed. To install the new motherboard, follow the directions in reverse.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 03:07:46 AM.